### ΚΩΔΙΚΌ ΤΕΧΝΙΚΟΎ

O	٨ίμ		
		2	Δίκτυο όμε
	_0	2 1	Οθόνη λέβητα
2	-0 Па	- <del>1</del> 0 áu	
	2	րսր Ո	Γενικές ΡυΑυίσεις
	-2 2	2	Ρυθυίσεις
	- Z つ	2	Γουμισεις Κεντοική θέομανση -1
	- Z 2	2	Κεντρική Θέρμανση -1
	- Z	4	ζεστό Νεοό Χούσης
	-2	5	Ζευτο περο Αριοης
	-2	0	
	-2 2	/	ελεγχοι & εςακριρωσεις
	- Z	8	
4	Zω	<b>νη</b> Ι	Παραμετροι
	_4	0	Ρυθμιση θερμοκρασίας
	_4	2	
	_4 4	ک م+	Διαγνωστικά Ζωντής Τ
5	Πα	ραμ	ετροι <b>Δωνης Δ</b> Ρύθιματι Αερμοκοσσίας
	_) F	U n	ευσμιση σερμοκρασιας Ρυθμίσεις Ζώνος?
	_ ⊃ _ r	2	ουτικά Ζώνης 2
	_5	3	
6	Πα	ραμ	ετροι Ζωνη 3
	_6	0	Ρυθμιση θερμοκρασιας
	_0	2	Ρυσμισεις Ζωνήςς
	_0	3	
8		ραμ	ετροι Γεχνικης Υποστηριςης
	_ð _0	ו ר	
-	_ð _0	2	Λεριτιας
	_0	2	Ηλιακός & Μπάιλεο
	_0 _0	4	Σέοβις
	_0 _0	5	Ζερρις
	_0	0	
<b>/AL</b> - Άμεα	ση πρ	οόσ	3αση στις παραμέτρους για επίδειξη
τληροφορ	οιών	σχε	τικά με την λειτουργία του λέβητα
82	1-8	22 -	824 - 825 - 827 - 830 - 831 - 832 - 833- 83
- 8	40		
<b>RR</b> - Δείχ	νει τα	α δέ	κα τελευταία σφάλματα από το ERR 0 έως τ
RR 9. Γυρ	ίστε	τον	επιλογέα για κύλιση στο ιστορικό
<b>CB</b> - Άμεσ	ση πρ	οόσ	βαση στις παραμέτρους για εξακρίβωση /
αλλαγή σε	περ	ίπτω	υση αντικατάστασης πλακέτας.
22	0 - 2	28 -	229 - 231- 232- 233 - 234 - 247
- 2	50 -	253	
<b>5AS</b> - Άμε	σn π	οόσ	βαση στις παραμέτρους για εξακρίβωση /
ιλλαγή σε	περ	ίπτω	νση ρύθμισης /αλλαγής αερίου
22	0 - 2	31-	232- 233 - 234 - 270
<b>ΕΤ</b> - Άμεσ	η πρ	όσβ	αση στις παραμέτρους για εξακρίβωση / αλλαγ
דב הברי אוניים ביות אוניים ביות ביות ביות ביות ביות ביות ביות ביות		οθμι <b>22</b>	
22	0 - 2	23 -	231 - 245 - 246
		- (	$\mathbf{D}_{-\beta}$
IME- YPC	NO	`	· · · · · · · · · · · · · · · · · · ·
IME- XPC		2 - \ 004	
IME- XPC	DNO DUR - ATF -	ΩPA HMI	- για να εισάγετε την ώρα - ΡΙα να εισάγετε την ώρα ΕΡΟΜΗΝΙΑ - για να εισάγετε την ημερομηνία
TIME- XPC HC DA 	DNO DUR - ATE - MFR -	ΩΡΑ ΗΜΙ	- για να εισάγετε την ώρα ΕΡΟΜΗΝΙΑ - για να εισάγετε την ημερομηνία

### SERVICE CODE

0       Network         0       2       Bus         0       4       User Interface         2       Boiler Parameter         2       2       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters         5       0       Set-point Zone3         6       2       Zone 3 Setting         5       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       8       Boiler         8       3       Boiler         8       5       Service <th>MENU</th> <th>сом</th> <th>PLET</th> <th><b>O</b> - see table on following pages</th>	MENU	сом	PLET	<b>O</b> - see table on following pages
O       2       Bus         O       4       User Interface         2       Boiler Parameter         2       2       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       0       Set-point Zone1         4       3       Diagnostics         5       Zone 1 Setting       -         4       3       Diagnostics         5       Zone 2 Setting       -         5       3       Diagnostics         6       Zone 3 Setting       -         6       3       Set-point Zone3         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       -         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8		0	letwo	ork
0       4       User Interface         2       Boiler Parameter         2       2       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       2       Set-point Zone1         4       2       Set-point Zone2         5       7       Test & Utilities         2       7       Test & Utilities         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       0       Set-point Zone2         5       1       Set-point Zone3         6       2       Zone 3 Setting         5       3       Diagnostics         8       8       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service			) 2	Bus
2       Boiler Parameter         2       0       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       6         6       3       Diagnostics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct acce			) <u> </u>	liser Interface
2       Boiler Parameter         2       0       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       2       Zone 1 Parameters         4       0       Set-point Zone1         4       2       Zone 2 Setting         5       0       Set-point Zone2         5       0       Set-point Zone3         6       0       Set-point Zone3         5       0       Set-point Zone3         6       1       Statistics         8       1       Statistics         8       1       Statistics         8       5       Service			, 4	
2       0       General setting         2       2       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Setting         5       3       Diagnostics         6       Zone 3 Setting         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler      <		2 E	Boiler	Parameter
2       2       General setting         2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       2       Set-point Zone1         4       3       Diagnostics         5       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       3       Diagnostics         8       1       Statistics         8       2       Boiler         8       3       Boiler         8       3       Boiler         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840			2 0	General setting
2       3       C.H. Parameters - Part 1         2       4       C.H. Parameters - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       20       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       5       Service         8       5       Service         8       5       Service         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler			2 2	General setting
2       4       Chineral interests - Part 1         2       5       Domestic Hot Water         2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       0       Set-point Zone1         4       2       Zone 1 Parameters         4       0       Set-point Zone1         4       3       Diagnostics         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       6         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding t			<u> </u>	C H Parameters - Part 1
2       6       Boiler manual settings         2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       Zone 1 Parameters         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Setting       5         5       2       Zone 2 Setting         5       3       Diagnostics         6       0       Set-point Zone3         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       6         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Tum the encoder			- + ) 5	Domestic Hot Water
2       7       Test & Utilities         2       8       Menù 2 Reset to factory setting         4       Zone 1 Parameters         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       6         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turm the en		-	- J ) 6	Boiler manual settings
2       8       Menù 2 Reset to factory setting         4       Zone 1 Parameters         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       6         6       3       Diagnostics         8       Service Parameter       8         8       Solar & Stringe       8         8       Solar & Storage       8         8       Service       8         8       Solar & Storage       8         8       Service       8         8       Service       8         8       Service       8     <			- 0 > 7	Test & Utilities
4       Zone 1 Parameters         4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters       5         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameters       6         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840         -835       ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in			- , > 8	Menù 2 Reset to factory setting
4       0       Set-point Zone1         4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters       5         5       2       Zone 2 Setting         5       3       Diagnostics         6       Zone 3 Parameters       6         6       0       Set-point Zone3         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         EERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of PC.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to ver		4 Z	Zone	1 Parameters
4       2       Zone 1 Setting         4       3       Diagnostics         5       Zone 2 Parameters         5       2       Zone 2 Setting         5       3       Diagnostics         6       Zone 3 Parameters         6       0       Set-point Zone3         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameter         8       1       Statistics         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         EER - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of PC.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 232 - 233 - 234 - 270 <th></th> <td>4</td> <td>+ 0</td> <td>Set-point Zone1</td>		4	+ 0	Set-point Zone1
4       3       Diagnostics         5       Zone 2 Parameters         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       Zone 3 Parameters       6         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History             VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turm the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of PC.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 232		4	¥ 2	Zone 1 Setting
5       Zone 2 Parameters         5       0       Set-point Zone2         5       2       Zone 2 Setting         5       3       Diagnostics         6       Zone 3 Parameters       6         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840         -835       Setter of Setting / change         Tum the encoder to scroll the		4	¥ 3	Diagnostics
<ul> <li>S 0 Set-point Zone2</li> <li>S 2 Zone 2 Setting</li> <li>S 3 Diagnostics</li> <li>6 Zone 3 Parameters</li> <li>6 0 Set-point Zone3</li> <li>6 2 Zone 3 Setting</li> <li>6 3 Diagnostics</li> <li>8 Service Parameter</li> <li>8 1 Statistics</li> <li>8 2 Boiler</li> <li>8 3 Boiler Temperature</li> <li>8 4 Solar &amp; Storage</li> <li>8 5 Service</li> <li>8 6 Error History</li> </ul> VAL - Direct access to the parameters for displaying information regarding the operation of the boiler 821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835 ERR - Show the last ten errors from ERR 0 to ERR 9. Turm the encoder to scroll the errors. PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement 220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253 GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas 220 - 231 - 232 - 233 - 234 - 270 SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 223 - 245 - 246 TIME - O - see page 37 HOUR - to insert the hour DATE - to select one of the predetermined programs for the Comfort		5 <b>Z</b>	Zone	2 Parameters
Figure 1.1 Section 1.2 Sect		·   5	50	Set-point Zone2
Image: Solution of the set of the s		<u> </u>	52	Zone 2 Setting
6       Zone 3 Parameters         6       0       Set-point Zone3         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameter       8         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History           VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835           ERR - Show the last ten errors from ERR 0 to ERR 9.        Turn the encoder to scroll the errors.          PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement          220 - 228 - 229 - 231 - 232 - 233 - 234 - 247          - 250 - 253    GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas  220 - 231 - 223 - 245 - 246     EVAL - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler  220 - 231 - 223 - 245 - 246		∟ 5	53	Diagnostics
6       0       Set-point Zone3         6       2       Zone 3 Setting         6       3       Diagnostics         8       Service Parameter         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 223 - 245 - 246         TIME - ① - see page 37         HOUR - to insert the hour         DATE - to iselect one of the predetermined programs for the comfort		6 <b>Z</b>	Zone	3 Parameters
<ul> <li>6 2 Zone 3 Setting</li> <li>6 3 Diagnostics</li> <li>8 Service Parameter</li> <li>8 1 Statistics</li> <li>8 2 Boiler</li> <li>8 3 Boiler Temperature</li> <li>8 4 Solar &amp; Storage</li> <li>8 5 Service</li> <li>8 6 Error History</li> </ul> VAL - Direct access to the parameters for displaying information regarding the operation of the boiler 821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835 ERR - Show the last ten errors from ERR 0 to ERR 9. Turn the encoder to scroll the errors. PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement 220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253 GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas 220 - 231 - 232 - 233 - 234 - 270 SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 223 - 245 - 246 TIME - ① - see page 37 HOUR - to insert the hour DATE - to insert the date TIMER - to select one of the predetermined programs for the Comfort		6	5 0	Set-point Zone3
<ul> <li>6 3 Diagnostics</li> <li>8 Service Parameter         <ul> <li>8 1 Statistics</li> <li>8 2 Boiler</li> <li>8 3 Boiler Temperature</li> <li>8 4 Solar &amp; Storage</li> <li>8 5 Service</li> <li>8 6 Error History</li> </ul> </li> <li>VAL - Direct access to the parameters for displaying information regarding the operation of the boiler</li> <li>821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835</li> <li>ERR - Show the last ten errors from ERR 0 to ERR 9. Turn the encoder to scroll the errors.</li> <li>PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement</li> <li>220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253</li> </ul> <li>GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas 220 - 231 - 232 - 233 - 234 - 270</li> <li>SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 223 - 245 - 246</li> <li>TIME - O - see page 37         <ul> <li>HOUR - to insert the hour DATE - to insert the date</li> <li>TIMER - to select one of the predetermined programs for the Comfact</li> </ul> </li>		6	52	Zone 3 Setting
8       Service Parameter         8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 223 - 245 - 246         TIME - ① - see page 37         HOUR - to insert the hour         DATE - to insert the date         TIMER - to select one of the predetermined programs for the Comfort		6	5 3	Diagnostics
8       1       Statistics         8       2       Boiler         8       3       Boiler Temperature         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 223 - 245 - 246         TIME - O - see page 37         HOUR - to insert the hour         DATE - to insert the date         TIMER - to select one of the predetermined programs for the Comfort		8 5	bervic	e Parameter
0       2       bolicit         8       3       Boiler Temperature         8       4       Solar & Storage         8       5       Service         8       6       Error History    VAL - Direct access to the parameters for displaying information regarding the operation of the boiler          821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833 - 840 - 835    ERR - Show the last ten errors from ERR 0 to ERR 9.          Turn the encoder to scroll the errors.    PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement          220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253    GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas          220 - 231 - 232 - 233 - 234 - 270    SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler          220 - 231 - 223 - 245 - 246    TIME - ① - see page 37          HOUR - to insert the hour         DATE - to insert the date         TIMER - to select one of the predetermined programs for the Comfort			o I o n	Statistics
8       4       Solar & Storage         8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of PC.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 223 - 245 - 246         TIME - O - see page 37         HOUR - to insert the hour         DATE - to insert the date         TIMER - to select one of the predetermined programs for the Comfort			י∠ ג ז	Boiler Temperature
8       5       Service         8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler         821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 247         - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 223 - 245 - 246         TIME - O - see page 37         HOUR - to insert the hour         DATE - to insert the date         TIMER - to select one of the predetermined programs for the Comfort			, , } 4	Solar & Storage
8       6       Error History         VAL - Direct access to the parameters for displaying information regarding the operation of the boiler       821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840 - 835         ERR - Show the last ten errors from ERR 0 to ERR 9.       Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement       220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas       220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler       220 - 231 - 223 - 245 - 246         TIME -			3 5	Service
VAL - Direct access to the parameters for displaying information regarding the operation of the boiler 821 - 822 - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840 -835 ERR - Show the last ten errors from ERR 0 to ERR 9. Turn the encoder to scroll the errors. PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement 220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253 GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas 220 - 231 - 232 - 233 - 234 - 270 SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 232 - 245 - 246 TIME -			3 6	Error History
ERR - Show the last ten errors from ERR 0 to ERR 9.         Turn the encoder to scroll the errors.         PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement         220 - 228 - 229 - 231 - 232 - 233 - 234 - 247         - 250 - 253         GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas         220 - 231 - 232 - 233 - 234 - 270         SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler         220 - 231 - 223 - 245 - 246         TIME - O - see page 37         HOUR - to insert the hour         DATE - to insert the date         TIMER - to select one of the predetermined programs for the Comfort	VAL - [ inform	Direct ation 821 - 835	acces regar - <b>822</b> -	s to the parameters for displaying ding the operation of the boiler - 824 - 825 - 827 - 830 - 831 - 832 - 833- 840
PCB - Direct access to the parameters to verify / change in the event of P.C.B. replacement 220 - 228 - 229 - 231 - 232 - 233 - 234 - 247 - 250 - 253 GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas 220 - 231 - 232 - 233 - 234 - 270 SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 223 - 245 - 246 TIME -	<b>ERR</b> - S Turn th	Show t ne enc	the la coder	st ten errors from ERR 0 to ERR 9. to scroll the errors.
GAS - Direct access to the parameters to verify / change in the event of adjustment / change gas 220 - 231 - 232 - 233 - 234 - 270 SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 223 - 245 - 246 TIME - ● - see page 37 HOUR - to insert the hour DATE - to insert the date TIMER - to select one of the predetermined programs for the Comfort	PCB - I in the	Direct event 220 - 250 -	acces of P.C - <b>228</b> ) - <b>25</b> 3	is to the parameters to verify / change .B. replacement - <b>229 - 231- 232- 233 - 234 - 247</b> 3
SET - Direct access to the parameters to verify / change in the event of setting/commissioning of the boiler 220 - 231 - 223 - 245 - 246 TIME - ① - see page 37 HOUR - to insert the hour DATE - to insert the date TIMER - to select one of the predetermined programs for the Comfort	GAS - in the	Direct event 220 ·	t acce t of ad - <b>231</b> -	ss to the parameters to verify / change ljustment / change gas • <b>232- 233 - 234 - 270</b>
TIME - ① - see page 37 HOUR - to insert the hour DATE - to insert the date TIMER - to select one of the predetermined programs for the Comfort	SET - D event	Direct of sett of sett 220 -	acces: ting/c - <b>231-</b>	s to the parameters to verify / change in the ommissioning of the boiler 223 - 245 - 246
HOUR - to insert the hour     DATE - to insert the date     TIMER - to select one of the predetermined programs for     the Comfort	TIME -	(b)-s	see pag	ge 37
DATE - to insert the date TIMER - to select one of the predetermined programs for the Comfort		HOU	K - to	insert the hour
L TIMER - to select one of the predetermined programs for			- to i	nsert the date
		TIME	R - to	select one of the predetermined programs for

		v			
	ó	ETPO			aloita
, oú	) Aller	pólui			
лзн	5	Ш	περιγραφή	τιμή	₿.g
KΩ	ΔIk	(O)	ΤΕΧΝΙΚΟΎ		
περ	οιστ	ρέι	υτε τον κωδικοποιητή δεξιόστρο	οφα για να επιλέξετε 23	4 και
πιε	στε	το : •••	πληκτρο ΟΚ		
0					
0	2		κττο βο3 Ενεονό δίκτυο	0 – Δέβρτας	
ľ	-			1= Διεπαφή συστήμα	τος
				2= Ελεγκτής ηλιακού	
				9 = Αισθητήρας	
				10 = Διαχειοιστής Ζώ	vnc
0	4	0	ΘΟΝΗ ΛΕΒΗΤΑ		
0	4	1	Χρονισμός φωτισμού	από 0 ως 10 (λεπτά) ή 24	24
				(ώρες)	
0	4	2	Πλήκτρο απενεργοποίησης	0 = Πλήκτρο ΑUTO	0
			θερμορύθμισης	ενεργοποιημένο	
				Ι=ΠΛηκτρο Αυτο	
2	ПА	PA	ΜΕΤΡΟΙ ΛΕΒΗΤΑ	αποτοργοποιτίμονο	
2	0	ГЕ	ΝΙΚΕΣ ΡΥΘΜΙΣΕΙΣ		
2	0	0	Ρύθμιση θερμοκρασίας ZNX	από 36 έως 60℃	
			PIGMA		
			Ρύθμιση θερμοκρασίας ZNX	από 40 έως 60°C	
			PIGMA SYSTEM		
			Ρϋθμιση με τον επιλογέα ΖΝΧ	(8)	
2	2	P۱	<b>ΓΘΜΙΣΕΙΣ</b>		
2	2	0	Αργή έναυση	από 0 έως 100	
			Προοριζεται αποκλειστικα για τ	ην υπηρεσια τεχνικης	
2	2	1	Μη Διαθέσιμο		
2	2	3	Μη Διαθέσιμο		
2	2	4	Θερμορύθμιση	0 = Απούσα	0
				1 = Παρούσα	
			Η Θερμορύθμιση μπορεί να ενε	ργοποιηθεί πιέζοντας τ	0
2	2	5	ΠΛητρο Αυτο. Καθυστέρηση εκκίνησης ΚΘ	0 - Ανενεονή	0
-	-			1 = 10 δευτερόλεπτα	
				2 = 90 δευτερόλεπτα	
				3 = 210 δευτερόλεπτα	
2	2	8	Έκδοση λέβητα - PIGMA	από θ έως 5	0
			Έκδοση λέβητα	0 = NA MHN	1
			PIGMA SYSTEM	ΧΡΗΣΙΜΟΠΟΙΗΘΕΙ	
				1 = θερμοσίφωνας,	
			Προσοχή! Αλλάξτε από 1 σε 2 σε	αισθητήρας ΝΙC	
			περίπτωση σύνδεσης σε	ή θερμοσίφωνας,	
			εξωτερικό μπόιλερ με	θερμοστάτης on/off	
			θερμοστάτη.	3-4-5 = NA MHN	
				Ι ΧΡΗΣΙΜΟΙ ΙΟΙΗΘΕΙ	
			ΥΠΟΣΤΗΡΙΞΗΣ Μόνο σε περίπτ	ωση αντικατάστασης	ικπλ
			ηλεκτρονικής κάρτας		
2	2	9	Ονομαστική ισχύς λέβητα		
			Ι ΙΡΟΟΡΙΖΕΙΑΙ ΑΙ ΙΟΚΛΕΙΣΤΙΚΑ ΓΙ ΥΠΟΣΤΗΡΙΞΗΣ Μόμο σε περίπτ	ΙΑ ΤΗΝ ΥΠΗΡΕΣΙΑ ΤΕΧΝ ωση αντικατάστασης	ικήΣ
			ηλεκτοονικής κάρτας	ωση αντικατάστασης	

menu	sub-menu	parameter	description	value	default setings				
SE	SERVICE CODE								
Ro	tat	e el	ncoder clockwise to select code	234 and press OK					
0	N	ЕТ	VORK	<b>i</b>					
0	2	Bl	JS NETWORK						
0	2	0	Network Presence	0 = Boiler 1= System interface 2= Solar Controller 9 = Room Sensor 10 = Zone Manager					
0	4	DI	SPLAY SETTING						
0	4	1	Backlight timing	from 0 to 10 (minutes) or 24 (hour)	24				
0	4	2	Thermoregulation button deactivation	0 = OFF 1 = ON	0				
2	BC	DIL	ER PARAMETER						
2	0	G	eneral		1				
2	0	0	DHW Setpoint Temperature PIGMA	from 36 to 60 (°C)					
			DHW Setpoint Temperature PIGMA SYSTEM	from 40 to 60 (°C)					
			Setting by DHW Knob (8)						
2	2	B	DILER GENERAL SETTINGS		1				
2	2	0	Soft ignition	from 0 to 100	60				
_	-		see parag. Gas settings						
2	2	1	<not available=""></not>						
2	2	<u>з</u>		0 – Absent	0				
-	-	-		1 = Present	0				
2	2	5	Heating ignition delay	0 = Deactivated 1 = 10 seconds	0				
				2 = 90 seconds					
2	2	0		3 = 210 seconds	0				
2	2	0	- NOT TO MODIFY						
			Boiler version	from 0 to 5	1				
			PIGMA SYSTEM	0 = NOT USED					
			- NOT TO MODIFY	1 = storage with					
			AITENTION ! Modify from 1 to 2 only	NIC 2 – storago with					
			with connection to	z – storage with					
			an external tank with	3 = NOT USED					
			thermostat ON/OFF	4 = NOT USED					
				5 = NOT USED					
<u> </u>			ONLY FOR SERVICE - To be used	d only in substitution P.C.E	3.				
2	2	9	Set boiler heat power						
			ONLY FOR SERVICE - To be used	d only in substitution P.C.E	3.				

μενού	υπομενού	παράμετρος	περιγραφή	τιμή	နာ႔စာဏအေရ အဖြိုးကျ				
-	-								
2	3	KE	ΕΝΤΡΙΚΗ ΘΕΡΜΑΝΣΗ -1						
2	3	0	Μέγιστη απόλυτη ισχύς θέρμανσης ΠΡΟΟΡΙΖΕΤΑΙ ΑΠΟΚΛΕΙΣΤΙΚΑ ΓΙ ΥΠΟΣΤΗΡΙΞΗΣ Μόνο σε περίπτ ηλεκτρονικής κάρτας	από 0 έως 100 Α ΤΗΝ ΥΠΗΡΕΣΙΑ ΤΕΧΝ ωση αντικατάστασης	ΙΚΗΣ				
2	3	1	Μεγ. Επίπ. ισχύος ΚΘ	από 0 έως 100	60				
			ρυθμιζόμ.						
			βλέπε Πίνακα σύνοψης αλλαγώ	V					
2	3	2	Μη Διαθέσιμο						
2	3	3	Μη Διαθέσιμο						
2	3	4	Μη Διαθέσιμο						
2	3	5	Τύπος καθυστέρ. ανάφλ. ΚΘ	0 = Χειροκίνητα 1 = Αυτόματα	1				
2	3	6	Επιλογή Τύπου καθυστέρησης έναυσης σε λειτουργία θέρμανσης	από 0 έως 7 λεπτά	3				
2	3	7	Μετα-κυκλοφορία σε λειτουργία θέρμανσης	από 0 έως 15 λεπτά ή CO (συνεχής)	3				
2	3	8	Έλεγχος ταχύτητας αντλίας	0 = Χαμηλή ταχύτητα 1 = Υψηλή ταχύτητα 2 = Διαμόρφωση	2				
2	3	9	Προγραμματισμός ΔΤ ρύθμισης κυκλοφορητή	από 10 έως 30 λεπτα					
			Προγραμματισμός για λειτουργί κυκλοφορητή	ία ρύθμισης του					
			Η παράμετρος αυτή επιτρέπει τα ης διαφοράς θερμοκρασίας μετ επιστροφής για τη μεταγωγή το σε υψηλή ταχύτητα. π.χ. παράμ. 239 = 20. Εάν Τκατ - η μέγιστη ταχύτητα του κυκλοφ Εάν Τκατ - Τεπ < 20 - 2°C ενεργο ταχύτητα κυκλοφορητή Ο ελάχι αλλαγή ταχύτητας είναι 5 λεπτά	ον προγραμματισμό αξύ κατάθλιψης και υ κυκλοφορητή από χα Τεπ > 20°C ενεργοποιει ιορητή ποιείται η ελάχιστη ιστος χρόνος αναμονής	μηλή ίται για				
2	4	KE	ΝΤΡΙΚΗ ΘΕΡΜΑΝΣΗ -2						
2	4	3	Μετα-εξαερισμός μετά από αίτηση θέρμανσης	0 = OFF 1 = ON	0				
2	4	4	Χρονοκαθυστέρηση μετά από αύξηση θερμοκρασίας θέρμανσης	από 0 έως 60 λεπτά	16				
			ενεργοποιημένη μόνο με ΤΑ Οη, ενεργοποιημένη (παράμετρος 4	/Off και θερμορύθμιση 121 ή 521 ή 621 = 01)					
			Αυτή η παράμετρος επιτρέπει να αναμονής πριν την αυτόματη αι εξόδου που υπολογίζεται με βή 12°C). Εάν αυτή η παράμετρος τ αυτή η λειτουργία δεν είναι ενερ	Αυτή η παράμετρος επιτρέπει να καθορίσετε το χρόνο αναμονής πριν την αυτόματη αύξηση της θερμοκρασίας εξόδου που υπολογίζεται με βήματα των 4°C (μέγιστη 12°C). Εάν αυτή η παράμετρος παραμένει με την τιμή 00, αυτή η λειτουογία δεν είναι ενεονοποιαιένη					
2	4	7	Ένδειξη διάταξης για πίεση κυκλώματος θέρμανσης	0 = αισθητήρας θερμοκρασίας μόνο 1 = διακόπτης πίεσης στο ελάχιστο 2 = αισθητήρας πίεσης	1				
			πιεσης ΠΡΟΟΡΙΖΕΤΑΙ ΑΠΟΚΛΕΙΣΤΙΚΑ ΓΙΑ ΤΗΝ ΥΠΗΡΕΣΙΑ ΤΕΧΝΙΚΗΣ ΥΠΟΣΤΗΡΙΞΗΣ Μόνο σε περίπτωση αλλαγής ηλεκτρονικής κάρτας						

menu	sub-menu	parameter	description	value	default setings					
2	3 CENTRAL HEATING PARAMETER - PART 1									
2 2	ך א	0	Maximum Central Heating	from 0 to 100						
-	-		Aboslute power							
_			ONLY FOR SERVICE - To be used	d only in substitution P.C.B						
2	3	1	Maximum Central Heating	from 0 to 100	60					
			power Aujustable							
2	3	2	<not available=""></not>							
2	3	3	<not available=""></not>							
2	3	4	<not available=""></not>							
2	3	5	Anti-cycling time mode	0 = Manual	1					
_	-		· ···· · · · · · · · · · · · · · · · ·	1 = Automatic						
2	3	6	Anti-cycling time	from 0 to 7 (minutes)	3					
_	-	_	(If  235 = 0)							
2	3	1	Central Heating pump	from 0 to 15 (minutes)	3					
2	3	8	Pump speed control	0 = Low speed	2					
				1= High speed						
_	_			2= Modulating						
2	3	9	Set Delta T Pump	from 10 to 30 °C	20					
			Parameter to set if Pump Speed	a control (237) is setted on						
			$\Delta T$ (flow - return) for circulation This parameter can be used to the flow and return temperatu commutation between low an speed. E.g.: param. $14 = 20$ if th circulation pump will be active Tflow - Tret < 20 - 2°C; the circu at minimum speed. The minimum wait time betwee minutes.	n pump modulation set the difference between res, which determines the d high circulation pump ne Tflow - Tret > 20°C; the ated at maximum speed. In lation pump will be active een speed changes is 5	n f the ated					
2	4	CE	ENTRAL HEATING PARAMET	ER - PART 1						
2	4	3	Post-ventilation after	0 = OFF	0					
_			Central Heating request	1 = ON	10					
2	4	4	Boost Time	from 0 to 60 (minutes)	16					
			only enabled with Room Therr	nostat on/off and						
			temperature adjustment activated (parameter 421 or 521 or							
			621 on 01 = Basic temperature adjustment)							
			This parameter can be used to	set the delay time before	or					
			(max. 12°C). If the value of this	parameter remains at 00	the					
			function is not activated.							
2	4	7	Central Heating Pressure	0 = Temperature	1					
			detection device	Probes only						
				2 = Pressure sensor						
			ONLY FOR SERVICE - To be used	d only in substitution P.C.B						

29

# Ρύθμιση

# Settings

μενού	υπομενού	παράμετρος	περιγραφή	τιμή	εργοστασιοική	hand	menu	sub-menu	parameter	description	value	default settings	
2	4	9	Διόρθωση εξωτερικής θερμοκρασίας	από -3 έως +3	0		2	4	9	External temperatura correction	from -3 to +3	0	
			Ενεργή μόνο με συνδεμένο εξ	ωτερικό αισθητήρα		_				Only active with external sen	sor connected		
		ZE	ΣΤΟ ΝΕΡΟ ΧΡΗΣΗΣ				_		D	OMESTIC HOT WATER			
2	5	PI	GMA EVO SYSTEM - Ενεργοπο	οιείται με clip-in			2	5	PI	GMA EVO SYSTEM - Activate	d with the boiler		
		00 (a	νοεοεμενο σε εςωτερικό θερ ισθητήρας ΝΤΟ)	μοοιφωνά με κπ			2	-	0	connected to a tank by an NTC sensor			
2	5	0	Λειτουργία Comfort	0 = Απενεργοποιημένη 1 = Βάση χρόνου 2 = Πάντα ενεονά	C	)	2	5	U		1 = Time Based 2 = Always active		
			Η συσκευή εγγυάται την διαθ νερού, αποθηκεύοντάς το δευτ 0= απενεργοποιημένη: Το εναλλάκτη δεν διατηρείται ζεσ 1=Προγραμματισμένη Άνεση: τ διατηρείται ζεστό κατά την δ ποργοαμματίστηκαν (βλέπε εν	ού τα τη ου				water by storing hot water in s 0 = deactivated : The water in t kept hot. 1 = timed / COMFORT pro- secondary exchanger is ke programmed (see the User's m 2 = always on / COMFORT:	e availability of domestic econdary exchanger. he secondary exchanger i grammed: the water ir pt hot during the pe anual). the water in the secor	is not is not the priods ndary			
			προγραμματίστηκαν (βλέπε εγχειρίδιο χρήστη) 2= COMFORT πάντα ενεργή: το δευτερεύοντα εναλλάκτη διατηρείται ζεστό 24 ώρες την ημέρα, 7 ημέρες την εβδομάδα. Όταν η λειτουργία είναι ενεργοποιημένη η οθόνη εμφανίζει							exchanger is kept hot 24 hours a day, 7 days a week When the function is enabled the text COMFORT appe on the display. <b>Note:</b> this function can be activated or deactivated by user as well - consult the User's Manual.			
			την ενδειζη COMPORT. <b>Σημ:</b> η λειτουργία αυτή μπομ απενεργοποιείται από τον χρήο	οεί να ενεργοποιείται τη επίσης – συμβουλει	ή ν υτεί	να τε	2	5	1	Comfort Anti-cycling Time	from 0 to 120 minutes	0	
			το Εγχειρίδιο Χρήστη .				2	5	2	Hot water flow delay	from 5 to 200 $(0.5 to 20 coronds)$	5	
2	5	1	Καθυστέρηση έναυσης κατά	από 0 έως 120	0	)				Anti "water hammerina"	(0.5 to 20 seconds)		
			τη διαρκεια ενος κυκλου	λεπτα			2	5	3	DHW switch logic	0 = Anti-scale	0	
2	5	2	COMFORT.         2         Χαθυστέρηση εξόδου         από 5 έως 200         5         5         2         Καθυστέρηση εξόδου         2         Καθυστέρηση εξόδου         2         Από 5 έως 200         5         5         2         Από 5 έως 200         5         2         Από 5 έως 200         5         2         Από 5 έως 200         5         2         Από 0,5 έως 20         5         Από 0,5 έως 20         Από 0,5         Από 0,5					$(\text{stop at} > 67^{\circ}\text{C})$ 1 = At 4°C over set- point					
			Προστασία από κρούση ύδατο				2	5	4	Post-circulation and post-	0 = OFF	0	
2	5	3	Σβήσιμο του καυστήρα σε λειτουργία ζεστού νερού	0 = προστασία κατά των αλάτων	C	)				ventilation after domestic hot water is drawn	1 = ON	ation	
			χρήσης στους > 67°C) 1 = + 4°C /ρύθμιση							after domestic hot water draw-off if the boiler temperature measured requires it.			
2	5	4	Μετα-κυκλοφορία και	0 = OFF 1 = ON	C	)				ON = always on for 3 minut ventilation after domestic hot	es post-circulation and water draw-off.	post-	
			μετα-εςαερισμος μετα απο άντληση ζεστού νερού χρήσης	TEON		_	2	5	5	Delay start in Central Heating after D.H.W.	from 0 to 30 (minutes)	0	
			OFF = 3 λεπτά μετα-κυκλοφορίας και μετα-εξαερισμού μετά από άντληση ζεστού νερού χρήσης εάν η θερμοκρασία τοι λέβητα που μετρήθηκε το απαιτεί.				2	5	7	Anti-legionella Function PIGMA SYSTEM	0 = OFF 1 = ON	0	
			ΟΝ = πάντα ενεργοποιημένη στα 3 λεπτά μετα-κυκλοφορίας και μετα-εξαερισμού μετά από άντληση ζεστού νερού χρήσης.							This function prevents the formation of Legionnaired disease bacteria which may develop in the piping an indirect cylinders at temperatures between 20°C and 40°C			
2	5	5	Χρονοκαθυστέρηση ζεστού νερού χρήσης	από 0 έως 30 λεπτά	C	)				If activated, whenever the ir stays below 59°C for over 10 water in the indirect culiade	ndirect cylinder tempera 0 hours, the boiler heat r uptil it reaches 65°C f	ature s the	
2	5	7	Λειτουργία κατά της λεγιονέλλας PIGMA SYSTEM	0 = OFF 1 = ON						minutes.			
			Αυτή η λειτουργία αποτρέ βακτηρίου της Νόσου των / φορές αναπτύσσεται στους α νερού, με θερμοκρασία μετ θερμοκρασίατης δεξαμενής ν. περισσότερες από 100 ώρες < είναι ενεργοποιημένη, ο λέβι νερό του δοχείου νερού χρή 65°C για 30 λεπτά.	πει το σχηματισμό \εγεωνάριων, που με σωλήνες και τις δεξα αξύ 20 και 40°C. Ε ερούχρήσηςπαραμέν < 59°C και εάν η λειτοι γτας ενεργοποιείται κ σης θερμαίνεται έως	τα ερικα μενα άν νει γι υργί και τ τοι	ου ές η ια ία το υς							

default setings

μενού	UTTOLLEVOÚ	παράμετρος	περιγραφή	τιμή	εργοστασιοική ρύθμιση
2	5	8	Συχνότητα αντιλεγιονέλλας	από 24 έως 720 (ώρες)	100
2	5	9	Θερμοκρ. στόχου αντιλεγιονέλ.	από 60 έως 70 (°C)	66
2	6	XE	ΕΙΡΟΚΙΝΗΤΕΣ ΡΥΘΜΙΣΕΙΣ ΛΕ	BHTA	
2	6	0	Ενεργοποίηση χειροκίνητου τρόπου	0 = OFF 1 = ON	0
2	6	1	Έλεγχος αντλίας λέβητα	0 = OFF 1 = ON	0
2	6	2	Έλεγχος ανεμιστήρα	0 = OFF 1 = ON	0
2	6	3	Έλεγχος βαλβίδας εκτροπής	0 = ZNX 1 = KΘ	0
2	7	E/	ΙΕΓΧΟΙ & ΕΞΑΚΡΙΒΩΣΕΙΣ		
2	7	0	Καθαρισμός καμινάδας	ΤΕST+ΊΙΙ = Μεγισχύς Θέρμανσης ΤΕST+≓ = Μεγισχύς ζ ΤΕST+ ΊΙΙΙ≓ = Ελάχιστ ισχύς	ZNX η
			Γυρίζοντας τον επιλογέα, επιτρέ λειτουργίας της μέγιστης και ελ Μπορείτε να ενεργοποιήσετε τη (Καμινάδα ενεργή) πιέζοντας τα δεύτερα.	τη ιοχο σερμανόης. Ξπει την επιλογή του τρό άχιστης ισχύος του ΖΝΧ γν Λειτουργία Καθαρισμ η πλήκτρο Reset για 10	που (. ιού
2	7	1	Κύκλος απαέρωσης	Πιέστε ESC για ενεργοποίηση	
2	8	М	ΕΝΟΥ ΕΠΑΝΕΚΚΙΝΗΣΗΣ		
2	8	0	Επαναφ. εργοστασ.ρυθμίσ.	Επαναφορά? ΟΚ=Ναι, esc=Όχι	
			Για να μηδενίσετε όλες τις παρα ρύθμισης, πιέστε το πλήκτρο Οι	μέτρους της εργοστασι Κ	ακής
4	ZΩ	NH	Ι 1 ΠΑΡΑΜΕΤΡΟΙ		
4	0	P۱	ΘΜΙΣΗ ΘΕΡΜΟΚΡΑΣΙΑΣ		
4	0	2	Θ ρυθμισης Ζ1	από 35 έως 85℃	70
4	2	P۱	(ΘΜΙΣΕΙΣ ΖΩΝΗΣ1		
4	2	1	Επιλογή βασικού τύπου θερμορύθμισης ανάλογα με τα συνδεδεμένα περιφερειακά Για να ενεργοποιήσετε τη θερμορύθμιση, πιέστε το πλήκτρο SRA. Στην οθόνη	0 = Σταθερή Θ προσαγωγής 1 = Αξεσουάρ On/Off 2 = Αισθητήρας Χώρου μόνο 3 = Εξωτερικός αισθητήρας μόνο 4 = Αισθητήρας Χώρου + Εξωτερικός αισθητήρας	
			ανάβει το σύμβολο SRA	= "L_ SRA 	

menu	sub-menu	parameter	description	value	default setings
ſ	<b>r</b>	0		frame 24 to 720 (Hours)	100
2	5 5	0 0	Antilegionella frequency	from 60 to 70 (°C)	66
2	2	9	temperature		00
2	6	BC	DILER MANUAL SETTINGS		
2	6	0	Manual mode activation	0 = OFF	0
	-	-		1 = ON	
2	6	1	Boiler pump control	0 = OFF 1 = ON	0
2	6	2	Fan control	0 = OFF 1 = ON	0
2	6	3	Fan control	0 = OFF 1 = ON	0
2	7	TE	ST & UTILITIES		
2	7	0	Test mode	TEST+'III = Max Heating power TEST+≓= Max DHW po TEST+'IIII ≓ = Minimum power.	wer
			Enabled also by pressing for 10 This function is deactivated au or when the RESET button is p	) seconds the Reset buttor tomatically after 10 minu ressed.	n. Ites,
2	7	1	Air purge Function	Press ESC button to acti	ve
2	8	RE	SET MENU' 2		
2	8	0	Reset factory settings	Reset OK = yes ESC = no	
			To reset all default parameter s	settings, press the OK butt	on
4	zo	DN	E 1 PARAMETER		
4	0	ZC	ONE 1 TEMPERATURE SETTI	NG	
4	0	2	Fix temperature central	from 35 to 82 (°C)	70
			heating		
			To set only with Fixed Flow Ten (see 421)	nperaure of Thermoreguld	ation
4	2	zo	ONE 1 SETTING		
4	2	1	Select Type of Thermoregulation	0 = Fixed Flow Temperature 1 = Basic Thermoreg. 2 = Room sensor 3 = Outdoor Temp. only 4 = Room sensor + outdoor Temp.	1
			To enabled thermoregulation press Auto button.		



menu

5

See parameter 422

**5 2 3** Parallel curve shift Zone 2

**5 2 4** Room sensor Influence

to calculate the setpoint temperature -Thermoregulation enabled-

**2 5** Maximum Central Heating

Temperature Zone 2

2 6 Minimum Central Heating

Temperature Zone 2

3 4 Heat Request Zone 2

**3 DIAGNOSTICS** 

5

5

5

5

calculation of the set-point.

influence to calculate the set-point

- only active when the BUS device is connected

Offset

μενού	υπομενού	παράμετρος	περιγραφή	τιμή	spycorcocord púðhran				
				•••					
5	ПА	ΠΑΡΑΜΕΤΡΟΙ ΖΩΝΗΣ 2							
5	0	P۱	(ΘΜΙΣΗ ΘΕΡΜΟΚΡΑΣΙΑΣ						
5	0	2	Θ ρυθμισης Ζ2	από 35 έως 85°C	70				
5	2	P۱	(ΘΜΙΣΕΙΣ ΖΩΝΗΣ2						
5	2	1	Επιλογή βασικού τύπου θερμορύθμισης ανάλογα με τα συνδεδεμένα περιφερειακά Για να ενεργοποιήσετε τη θερμορύθμιση, πιέστε το πλήκτρο SRA. Στην οθόνη ανάβει το σύμβολο SRA	0 = Σταθερή Θ προσαγωγής 1 = Αξεσουάρ On/Off 2 = Αισθητήρας Χώρου μόνο 3 = Εξωτερικός αισθητήρας μόνο 4 = Αισθητήρας Χώρου + Εξωτερικός αισθητήρας	1				
5	2	2	Καμπύλη Αςομοούθυμσης	από 1.0 έως 3.5	15				
5	2	3	Βλέπε παράμετρος 422 Σε περίπτωση χρήσης του εξωτ λέβητας υπολογίζει την πιο κατι εξόδου λαμβάνοντας υπόψη τη και τον τύπο της εγκατάστασης Ο τύπος καμπύλης πρέπει να επ τον τύπο σώματος της εγκατάσ κατοικίας.	ερικού αισθητήρα, ο άλληλη θερμοκρασία ιν εξωτερική θερμοκρασί ι ιλεχθεί σε συνάρτηση μ τασης και τη μόνωση τι από -14 έως +14	σία ιε ης				
			Για να προσαρμόσετε τη θερμικ της εγκατάστασης μπορείτε να την καμπύλη, κατά τέτοιον τρόη την υπολογισμένη θερμοκρασία τη θερμοκρασία περιβάλλοντο Μπαίνοντας στην παράμετρο τον επιλογέα <b>4</b> , η καμπύλη μπ παράλληλα όπως φαίνεται στα μετατόπισης μπορεί να διαβασ +14 για συσκευές υψηλής θερμ Κάθε βήμα αντιστοιχεί σε έναν θερμοκρασίας προσαγωγής σύ σημείου ορισμού.	ή καμπύλη στις απαιτή μετατοπίσετε παράλλη το ώστε να τροποποιήσ α εξόδου και κατά συνέ ς. αυτή ή στρέφοντας ορεί να μετατοπιστεί ο παρακάτω σχήμα. Η τεί στην οθόνη. Από -14 οκρασίας. 1 C αύξησης/μείωσης τι μφωνα με την τιμή του	σεις λα ετε πεια τιμή ! έως ης				
5	2	4	Αναλογία επιρροής Χώρου από 0 έως + 20 20 εάν η ρύθμιση = 0, η θερμοκρασία του αισθητήρα περιβάλλοντος που μετρήθηκε δεν επηρεάζει τον υπολογισμό της ρύθμισης. Εάν η ρύθμιση = 20, η θερμοκρασία που μετρήθηκε έχει μένιστη επιοροή στη ούθυση						
5	2	5	Ρύθμιση μέγιστης θερμοκρασίας θέρμανσης περιοχής 2	από 35 έως + 82°C	82				
5	2	6	Ρύθμιση ελάχιστης θερμοκρασίας θέρμανσης περιοχής 2	από 35 έως + 82°C	40				
5	3	Δ	ΑΓΝΩΣΤΙΚΑ ΖΩΝΗΣ 2						
5	3	4	Αίτημα θέρμανσης Ζ2	0 = OFF 1 = ON					



Only enabled when an outdoor sensor is installed When an outdoor sensor is used, the boiler calculates the most suitable delivery temperature, taking into account the outside temperature and type of system. The type of curve should be selected in correspondence with the projected temperature of the system and the nature of the dispersions present in the structure. For high-temperature systems, one

of the curves depicted below may be chosen.

is modified, in addition to the room temperature.

- from -14 to +14°C (high temperature)

of 1°C in relation to the set-point value.

To adapt the heating curve to the system requirements, shift the curve in parallel so that the calculated flow temperature

By accessing this parameter or turning the knob **4** the curve can be shifted in a parallel manner as indicated in the figure shown below. The value is indicated on the display:

Each step represents a flow temperature increase/ decrease

If setted = 0 the room temperature doesn't influence the

If setted = 20, the room temperature has the maximum

from - 14 to + 14 (°C)

from 0 to 20

from 35 to 82 °C

from 35 to 82 °C

0 = OFF1 = ON

0

20

82

40

μενού	υπομενού	παράμετρος	περιγραφή	τιμή	ะอุกออกออเลก์ ควัติมเฮา		
6	ПА	PA	ΜΕΤΡΟΙ ΖΩΝΗΣ 3				
6	0	P١	ΘΜΙΣΗ ΘΕΡΜΟΚΡΑΣΙΑΣ				
6	0	2	Θ ρυθμισης Ζ3	από 35 έως 85°C	70		
6	2	P٦	ΘΜΙΣΕΙΣ ΖΩΝΗΣ3				
6	2	1	Επιλογή βασικού τύπου θερμορύθμισης ανάλογα με τα συνδεδεμένα περιφερειακά Για να ενεργοποιήσετε τη θερμορύθμιση, πιέστε το πλήκτρο SRA. Στην οθόνη ανάβει το σύμβολο SRA	0 = Σταθερή Θ προσαγωγής 1 = Αξεσουάρ On/Off 2 = Αισθητήρας Χώρου μόνο 3 = Εξωτερικός αισθητήρας μόνο 4 = Αισθητήρας Χώρου + Εξωτερικός αισθητήρας	1		
6	2	2	Καμπύλη Αερμορύθυμσης	από 1.0 έως 3.5	15		
			οκεπε παραμετρος 422 Σε περίπτωση χρήσης του εξωτ λέβητας υπολογίζει την πιο κατα εξόδου λαμβάνοντας υπόψη τη και τον τύπο της εγκατάστασης. Ο τύπος καμπύλης πρέπει να επ τον τύπο σώματος της εγκατάστ	ερικού αισθητήρα, ο άλληλη θερμοκρασία ν εξωτερική θερμοκρας ιλεχθεί σε συνάρτηση μ τασης και τη μόνωση τη	τία ε ς		
	-	-	κατοικιας.				
0	2	3	Για να προσαρμόσετε τη θερμικ της εγκατάστασης μπορείτε να την καμπύλη, κατά τέτοιον τρόπ την υπολογισμένη θερμοκρασία τη θερμοκρασία περιβάλλοντος Μπαίνοντας στην παράμετρο τον επιλογέα <b>4</b> , η καμπύλη μπι παράλληλα όπως φαίνεται στο Η τιμή μετατόπισης μπορεί να δ Από -14 έως +14 για συσκευές υ Κάθε βήμα αντιστοιχεί σε έναν Θερμοκρασίας προσαγωγής σύ σημείου ορισμού.	απο - 14 εως + 14 ή καμπύλη στις απαιτής μετατοπίσετε παράλληλ το ώστε να τροποποιήσε α εξόδου και κατά συνέπ , αυτή ή στρέφοντας ορεί να μετατοπιστεί ο παρακάτω σχήμα ιαβαστεί στην οθόνη. ψηλής θερμοκρασίας. 1 C αύξησης/μείωσης τη μφωνα με την τιμή του	0 <i>Σ</i> εις α :τε <i>τ</i> εια )ς		
б	2	4	Αναλογία επιρροής Χώρου από 0 έως + 20 20 εάν η ρύθμιση = 0, η θερμοκρασία του αισθητήρα περιβάλλοντος που μετρήθηκε δεν επηρεάζει τον υπολογισμό της ρύθμισης. Εάν η ρύθμιση = 20, η θερμοκρασία που μετρήθηκε έχει μένιστη επιοροή στη ούθμιση				
6	2	5	Ρύθμιση μέγιστης θερμοκρασίας θέρμανσης περιοχής 3	από 35 έως + 82°C	82		
6	2	6	Ρύθμιση ελάχιστης θερμοκρασίας θέρμανσης περιοχής3	από 35 έως + 82°C	40		
6	3	ΔΙ	ΑΓΝΩΣΤΙΚΑ ΖΩΝΗΣ 3				
6	3	4	Αίτημα θέρμανσης Ζ2	0 = OFF 1 = ON			

menu	sub-menu	parameter	description	value	default	setings

6	ZC	ZONE 3 PARAMETER				
6	0	ZC	ONE 3 TEMPERATURE SETTI	NG		
6	0	2	Fix temperature central heating	from 35 to 82 (°C)	70	
			To set only with Fixed Flow Ten	nperaure of Thermoreguld	ation	
			(see 621)	-		
6	2	ZC	ONE 3 SETTING			
6	2	1	Select Type of	0 = Fixed Flow	1	
			Thermoregulation	Temperature		
				1 = Basic Thermoreg.		
			To enabled thermoregulation	2 = Room sensor		
			press SRA button.	3 = Outdoor Temp.		
				4 = Room sensor +		
				outdoor Temp.		
6	2	2	Zone 3 Slope	from 1.0 to 3.5	1.5	
			See parameter 622			
			Only enabled when an outdoo	or sensor is installed		
			When an outdoor sensor is u	ised, the boiler calculates	s the	
			most suitable delivery temper	ature, taking into accoun	t the	
			outside temperature and type	e of system. The type of c	urve	
			should be selected in corres	pondence with the proje	ected	
			temperature of the system and	d the nature of the dispers	sions	
			present in the structure. For h	ign-temperature systems,	one	
6	ſ	2	Darallal curves depicted below in	from 14 to 1 14 (°C)	0	
0	2	3	Offset	110111 - 1410 + 14(C)	0	
			To adapt the heating curve to	the system requirements.	shift	
			the curve in parallel so that the	e calculated flow tempera	ture	
			is modified, in addition to the i	room temperature.		
			By accessing this parameter or	turning the knob <b>4</b> the cu	irve	
			can be shifted in a parallel manner as indicated in the figure			
			- from $-14$ to $+14^{\circ}$ C (high temperature)			
			Each step represents a flow temperature increase/ decrease			
			of 1°C in relation to the set-poi	nt value.		
6	2	4	Room sensor Influence	from 0 to 20	20	
			to calculate the set-			
			point temperature -			
			Inermoregulation enabled-			
			If setted = 0 the room temperature doesn't influence the			
			calculation of the set-point. If setted $= 20$ , the room temperature has the maximum			
			influence to calculate the set-r	nperature nus the muxi point	mun	
			- only active when the BUS dev	vice is connected		
6	2	5	Maximum Central Heating	from 35 to 82 °C	82	
			Temperature Zone 2			
6	2	6	Minimum Central Heating	from 35 to 82 °C	40	
			Temperature Zone 2			
6	3	D	AGNOSTICS			
6	3	4	Heat Request Zone 2	0 = OFF		
				1 = ON		

εργοσταταική ρύθμιση

		v		
	.,	<u>d</u>		
ċ,	8	S		
2	3no	, jo		
Ъ	5	рш	περιγραφή	τιμή

8	ΠΑΡΑΜΕΤΡΟΙ ΤΕΧΝΙΚΗΣ ΥΠΟΣΤΗΡΙΞΗΣ					
8	1	ΣΤΑΤΙΣΤΙΚΆ				
8	1	0	Ο Ώρες καυστήρα ΟΝ ΚΘ (h x10)			
8	1	1	Ώρες καυστήρα ΟΝ ΖΝΧ (h x1	0)		
8	1	2	Αρ. σφαλμάτων φλόγας (n x10	)		
8	1	3	Αρ. κύκλων έναυσης (n x10)			
8	1	4	Μέση διάρκεια ζήτησης θέρμα	ανσης		
8	2	۷.	EBHTA8			
8	2	0	Επίπεδο ούθμισης καυστήρα	0-165 mA		
	[		Μετρήστε το mA στο ρυθμιστή	της		
8	2	1	Κατάσταση ανεμιστήρα	0 = OFF		
				1 = ON		
8	2	3	Ταχύτητα αντλίας	0 = OFF		
				1 = χαμηλή		
	-		01 0.2015 1	$2 = 0\psi\eta\lambda\eta$	,	
8	2	4	Θέση βαλβιοας εκτροπης	0 = Ζεστο νερ 1 = Κεντοικό	0	
				θέομανση		
8	2	5	Ρυθυός ορής ΖΝΧ Ι/min			
8	2	6	Κατάσταση πιεζοστάτη	0 = Ανοικτός		
			καυσαερίων	1 = κλειστός		
8	2	8	<b>Β</b> Ισχύς αερίου			
8	3	Θ	ΕΡΜΟΚΡΑΣΙΑ ΛΕΒΗΤΑ			
8	3	0	Ρυθμισμένη θερμοκρασία ΚΘ			
8	3	1	Θ κατάθλιψης ΚΘ			
8	3	2	Θ επιστροφής ΚΘ			
8	3	3	Θ ροής ZNX			
8	3	5	Εξωτερική θερμοκρασία			
			Μόνο με συνδεμένο εξωτερικό	αισθητήρα		
8	4	H	ΛΙΑΚΟΣ & ΜΠΟΪΛΕΡ			
8	4	2	Θ εισόδου ΖΝΧ			
			Επίδειξη μόνο με Ηλιακό κιτ ή κιτ εξ	ξωτερικού κυλίνδρ	000	
-	-		ουνοεμενα			
8	5	Σt		( ) ( )		- 1
8	5	0	Μηνες για την επομενη	απο 0 εως 60		24
			ουντηρηση (μηνες)			
			Αν οριστει, ο Λεβητας θα οειζει οτι ειναι η ωρα να καλέσετε τεχνικό για συντήρηση			
8	5	1	Ημέρες για συντήρηση	0 = OFF	0	
			ενεργές	1 =ON		
8	5	2	Επανεκ. προειδοπ.	Μηδενισμός		
			συντήρησ.	$OK = v\alpha i$		
				ESC = OXI		
0	F	л	για απαλοιφή της συμρουλης γι Έκδοση Hardware ηλεκτοοιικ	α συντηρηση ής πλακέτας		
0 0	5	5	Έκδοση λονισμικού ηλεκτοου	κής πλακέτας		
0	<b>_</b>	<b>ο</b> εκούοι πογισμικού ηλεκτρονικής πλακετάς				

nu	-menu	ameter			ault	ngs
mei	dus	parë	description	value	defa	settin

8	SE	SERVICE PARAMETERS				
8	1	S٦	TATISTICHE			
8	1	0	Hours Burner On (Central Heating) (XXh)			
8	1	1	Hours Burner On (Domestic H	Hot Water) (XXh)		
8	1	2	Number of Flame Faults			
8	1	3	Numbeer of ignition Cycles			
8	1	4	Heat request Duration			
8	2	BC	DILER			
8	2	0	Modulation Rate	from 0 tp 165 (mA)		
8	2	1	Fan Status	0 = OFF		
				1 = ON		
8	2	3	Pump speed	0 = OFF		
				1 = Low speed		
0	2	4	Diverter value position	2 = High speed		
0	2	4	Diverter valve position	0 = 0.0.w. 1 = Central Heating		
8	2	5	D.H.W. Flow Rate (l/min)	<b>y</b>		
8	2	6	Air Pressure Switch Status	0 = Open		
			1 = Closed			
8	2	8	Gas Power (kW)			
8	3	B	OILER TEMPERTURE			
8	3	0	Set temperature Central Heating(°C)			
8	3	1	Flow Heating temperature (°C)			
8	3	2	Return Heating temperature	(°C)		
8	3	3	Domestic Hot Water Tempera	ature (°)		
8	3	5	Outdoor temperature (%)			
			Only with external sensor con	nected		
8	4	SC	DLAR & STORAGE			
8	4	2	D.H.W. Inlet Temperature (°C)			
			Display only with Solar Kit or external	storage Kit		
8	5	SE	SERVICE			
8	5	0	Months to next	from 0 to 60 (month)	24	
	maintenance					
			If setted the boiler will display that is time to call the installer			
	_		for maintenance	0.055.4.01		
8	5	1	Enable Maintenance advice	U = OFF - 1 = ON	0	
8	5	2	Maintenance Warning Reset   Reset? OK= Yes Esc = No			
			to erase the advice for mainter	nance		
8	5	4	P.C.B Hardware version			
8	5	5	P.C.B Software version			

μενού	υπομενού	ο δ α μα φή περιγραφή	τιμή	spycorooloten o'Aucr
8	6	ΙΣΤΟΡΙΚΟ ΣΦΑΛΜΑΤΩΝ		

8	6	0	Τελευταία 10 σφάλματα	από Err 0 έως Err 9	
			Η παράμετρος επιτρέπει την απεικά σφαλμάτων του λέβητα δείχνοντας Πηγαίνοντας στην παράμετρο, απε σφάλματα που διαπιστώθηκαν από ριθμό Err 9. Για κάθε σφάλμα απεικονίζεται διασ Err 0 : αριθμός σφάλματος 108 : κωδικός σφάλματος / : ημέρα και μήνας(*) : έτος (*) (*) = μόνο με τον ορισμό ημερο	όνιση των τελευταίων 10 ; μέρα, μήνα και έτος. ικονίζονται διαδοχικά τα ό τον αριθμό Err 0 έως τον δοχικά: μηνίας στο μενού ΧΡΟΝ	ΙΟΥ
8	6	1	Επαναφορά λίστας σφαλμάτων	Επανεκκίνηση; ΟΚ=Ναι, esc= Όχι	

ΜΕΝΟΥ ΤΙΜΕ (Ανεγεργό με συνδεμένο γειοιστήριο αποστάσεως)						
HOUR - πιέστε το πλήκτρο ΜΕΝU/ΟΚ και γυρίζοντας τον επιλογέα 4 επιλέγετε την ώρα.						
<b>DATE</b> - πιέστε το πλήκτρο MENU/OK						
DAY - πιέστε το πλήκτρο MENU/OK και γυ 4 επιλέγετε την ημέρα	ρίζοντας τον επιλογέα					
MONTH - πιέστε το πλήκτρο MENU/OK κ επιλογέα 4 επιλέγετε τον μήνα	αι γυρίζοντας τον					
YEAR - πιέστε το πλήκτρο MENU/OK και επιλογέα 4 επιλέγετε το έτος	γυρίζοντας τον					
<b>ΤΙΜΕR</b> - πιέστε το πλήκτρο ΜΕΝU/ΟΚ και γυμ 4 επιλέγετε τα προκαθορισμένα προγράμματ	οίζοντας τον επιλογέα Γα					
PROG1 - προκαθορισμένο πρόγραμμα 1	06:00 -22:00					
PROG2         06:00 - 8:00           προκαθορισμένο πρόγραμμα 2         12:00 - 14:00           17:00 - 2:00         17:00 - 2:00						
PROG3         06:00 - 8:00           προκαθορισμένο πρόγραμμα 3         16:00 - 2:00						

Πιέστε το πλήκτρο ΜΕΝU/ΟΚ για επιβεβαιώσετε την επιλογή. Πίεστε το πλήκτρο ESC να να επανέλθετε στην κανονική οθόνη.

astp-menu astp-menu description value	dafault setings
---	--------------------

8	6	EF	ROR HISTORY		
8	6	0	Last 10 errors	from Err to Err9	
			This parameter makes it poss shown by the boiler as well as year. Access the parameter to b from number Err 0 to number b The following data is shown error: Err 0 : error number 1 08 : error code / : day and month (*) : year (*) (*) = only with the date set in t	sible to see the last 10 e the relevant day, month pring up the sequence of e Fr 9. in a sequence for each si he TIME menu	rrors and rrors ingle
8	6	1	Reset Error List	Reset?	
				Ok=Yes	
				Esc=No	

MENU TIME (Not active with Remote Control connected)						
HOUR - press the MENU/OK button and turning select the hour	HOUR - press the MENU/OK button and turning the knob 4 to select the hour					
DATE - press the MENU/OK button						
DAY - press the MENU/OK button and turning select the day	the knob 4 to					
<b>MONTH</b> - press the MENU/OK button and tue 4 to select the month	rning the knob					
YEAR - press the MENU/OK button and turning to select the year	ng the knob 4					
TIMER - press the MENU/OK button and turning select the pre-set Timer	the knob 4 to					
PROG1 - 06:00 - 22:00						
PROG2 Pre-set program 2	06:00 - 08:00 12:00 - 14:00 17:00 - 22:00					
PROG3 Pre-set program 3	06:00 - 08:00 16:00 - 22:00					

*Press the MENU/OK button* to confirm the selection. Press the ESC button to restore the normal display screen.